




EP-42F

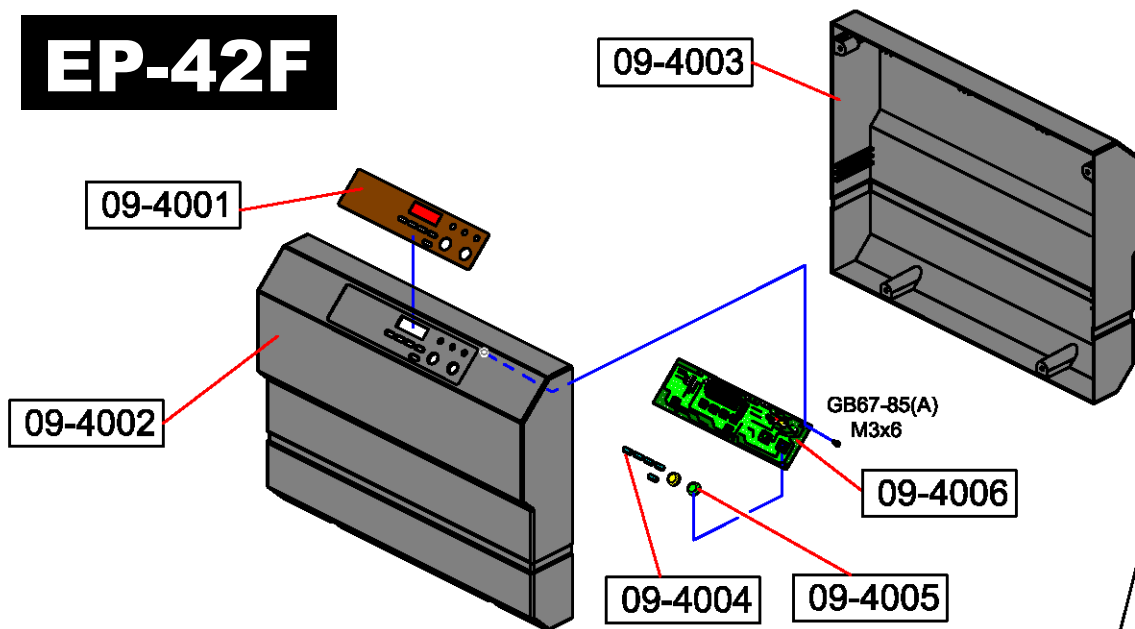


EP-45F TPF-45

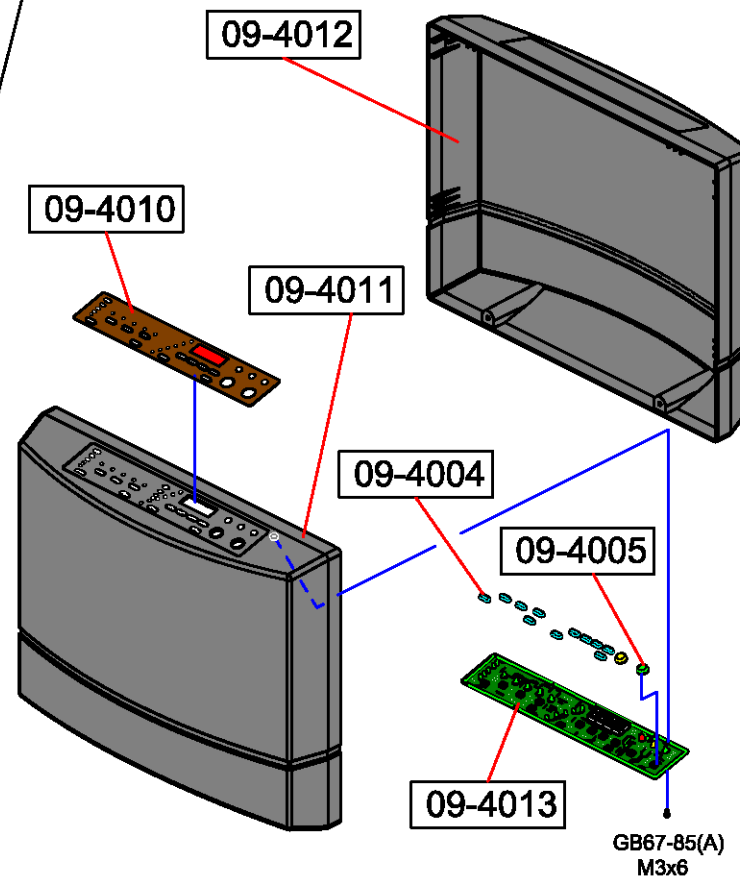


EP-42S TPF-42

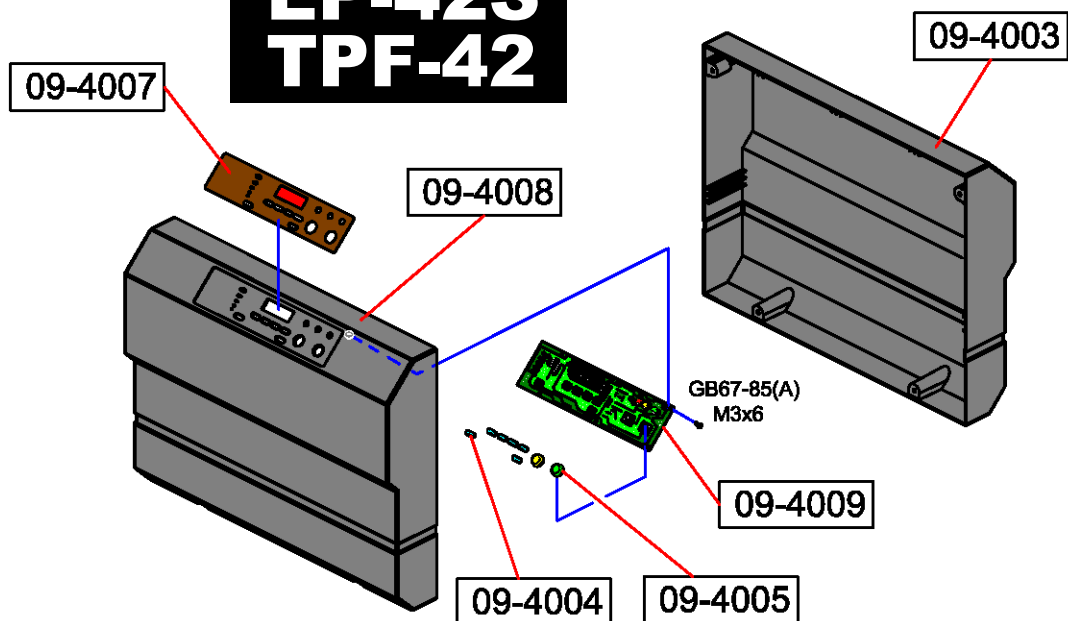

EP-42F/EP-42S/EP-45F TPF-42/TPF-45

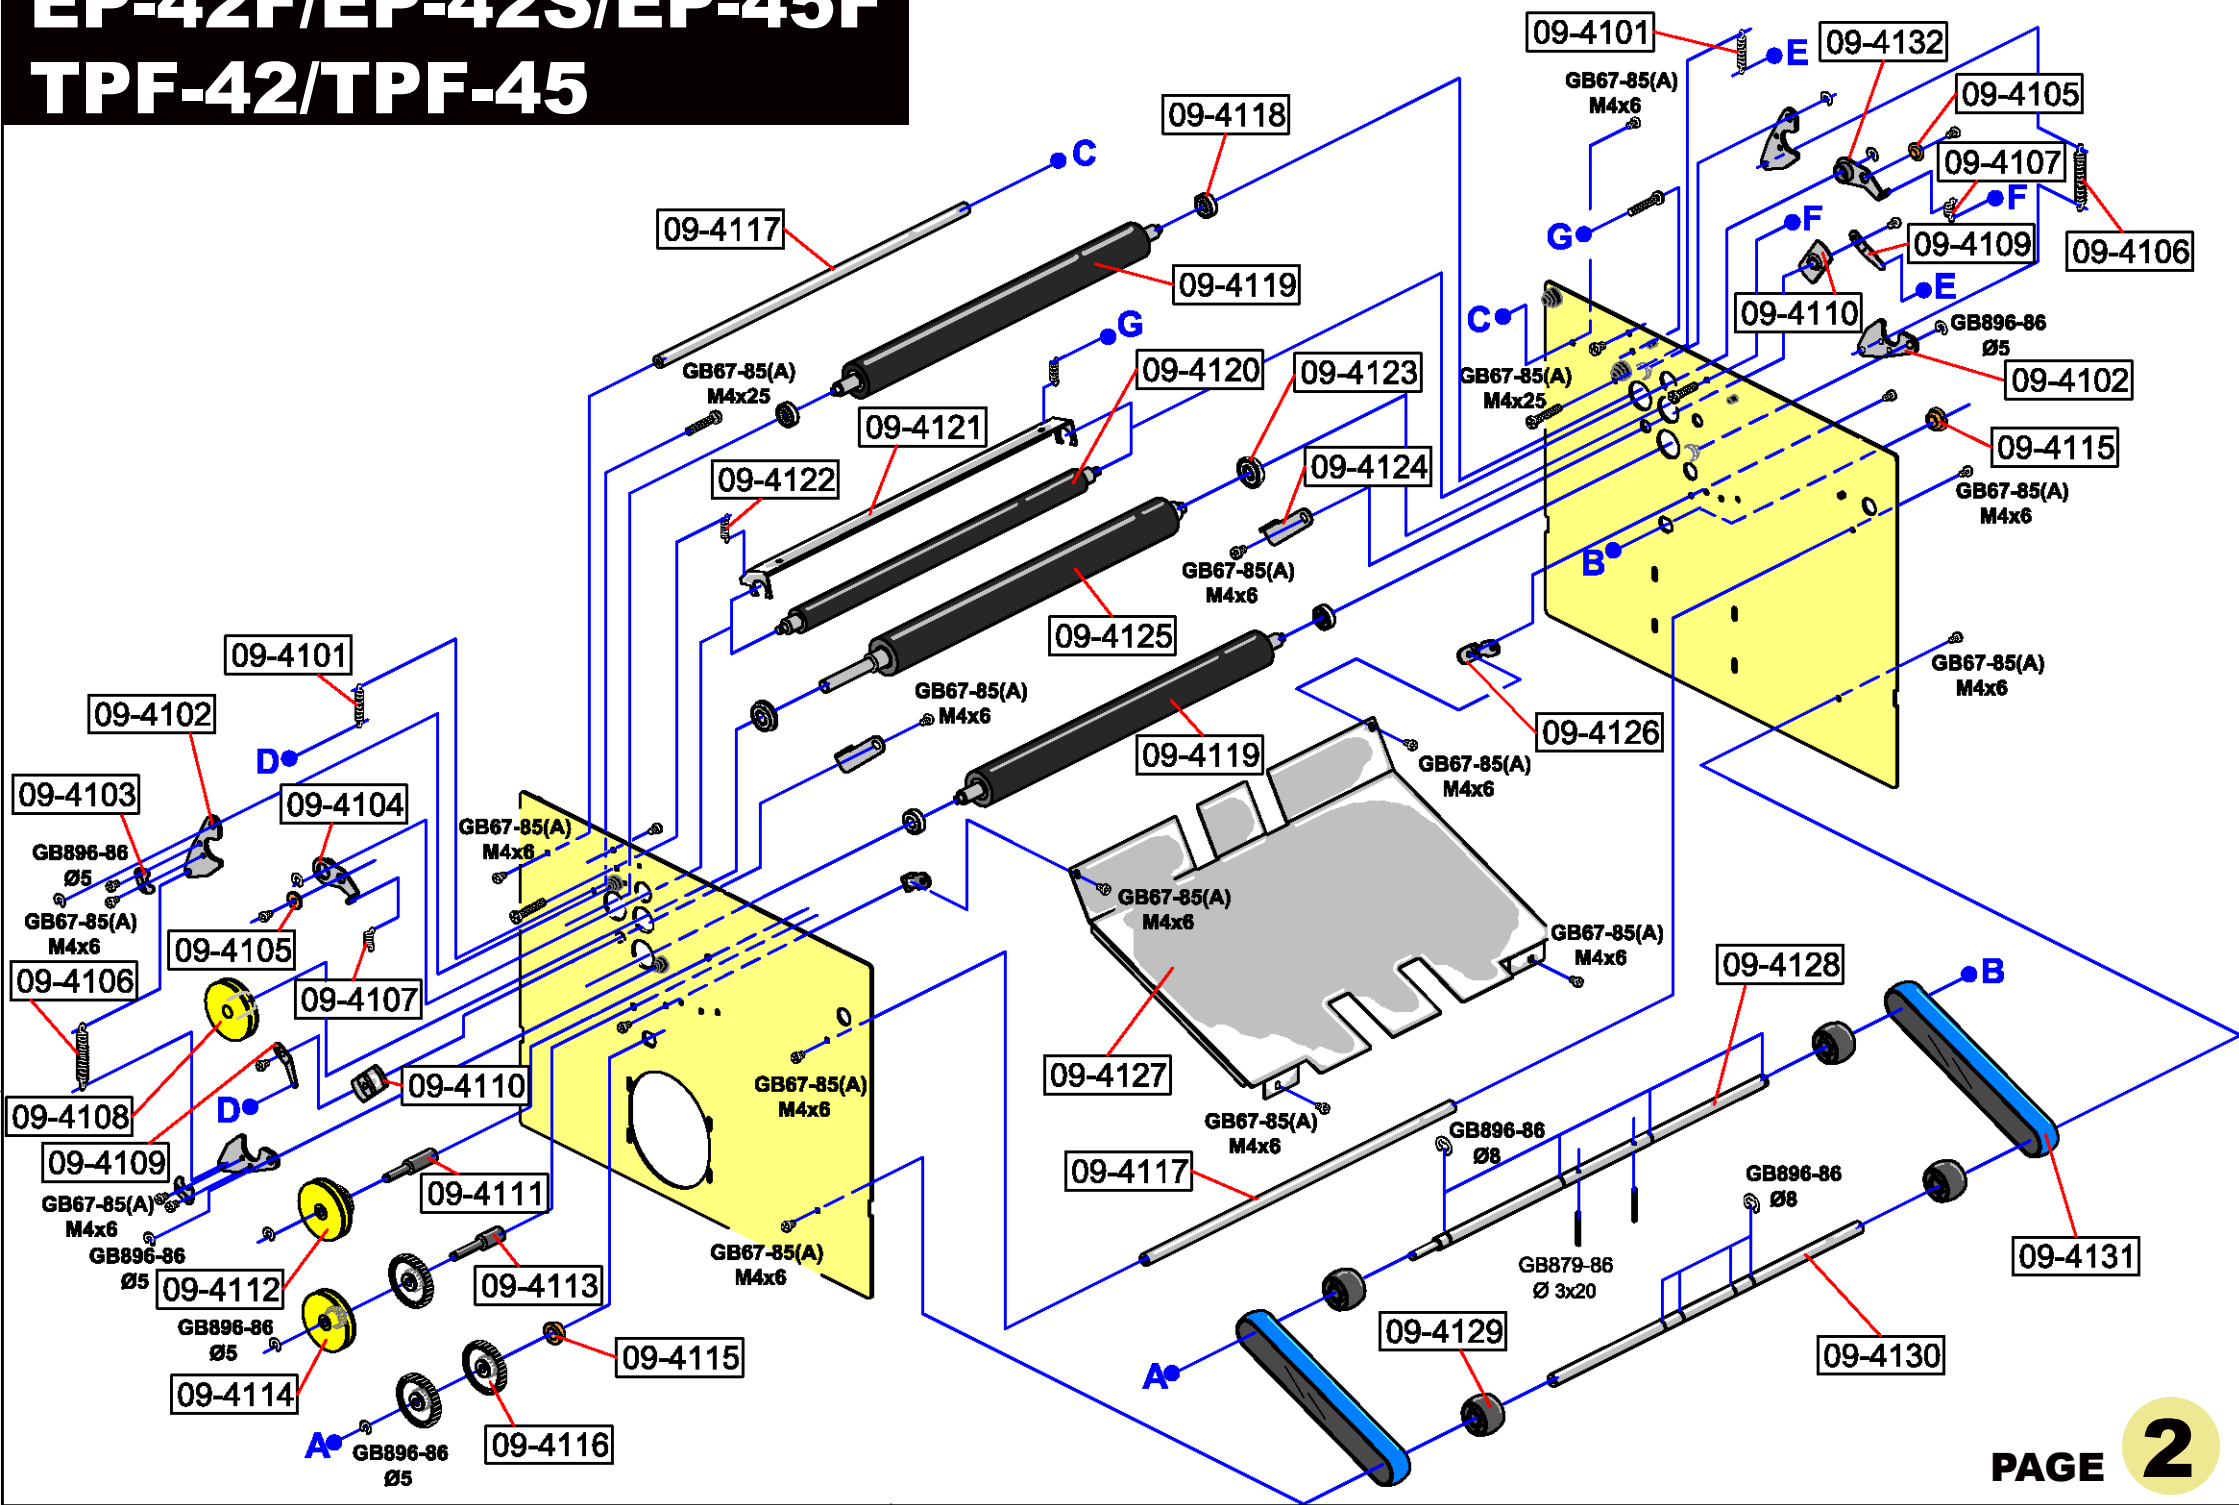


EP-42F/EP-42S/EP-45F TPF-42/TPF-45

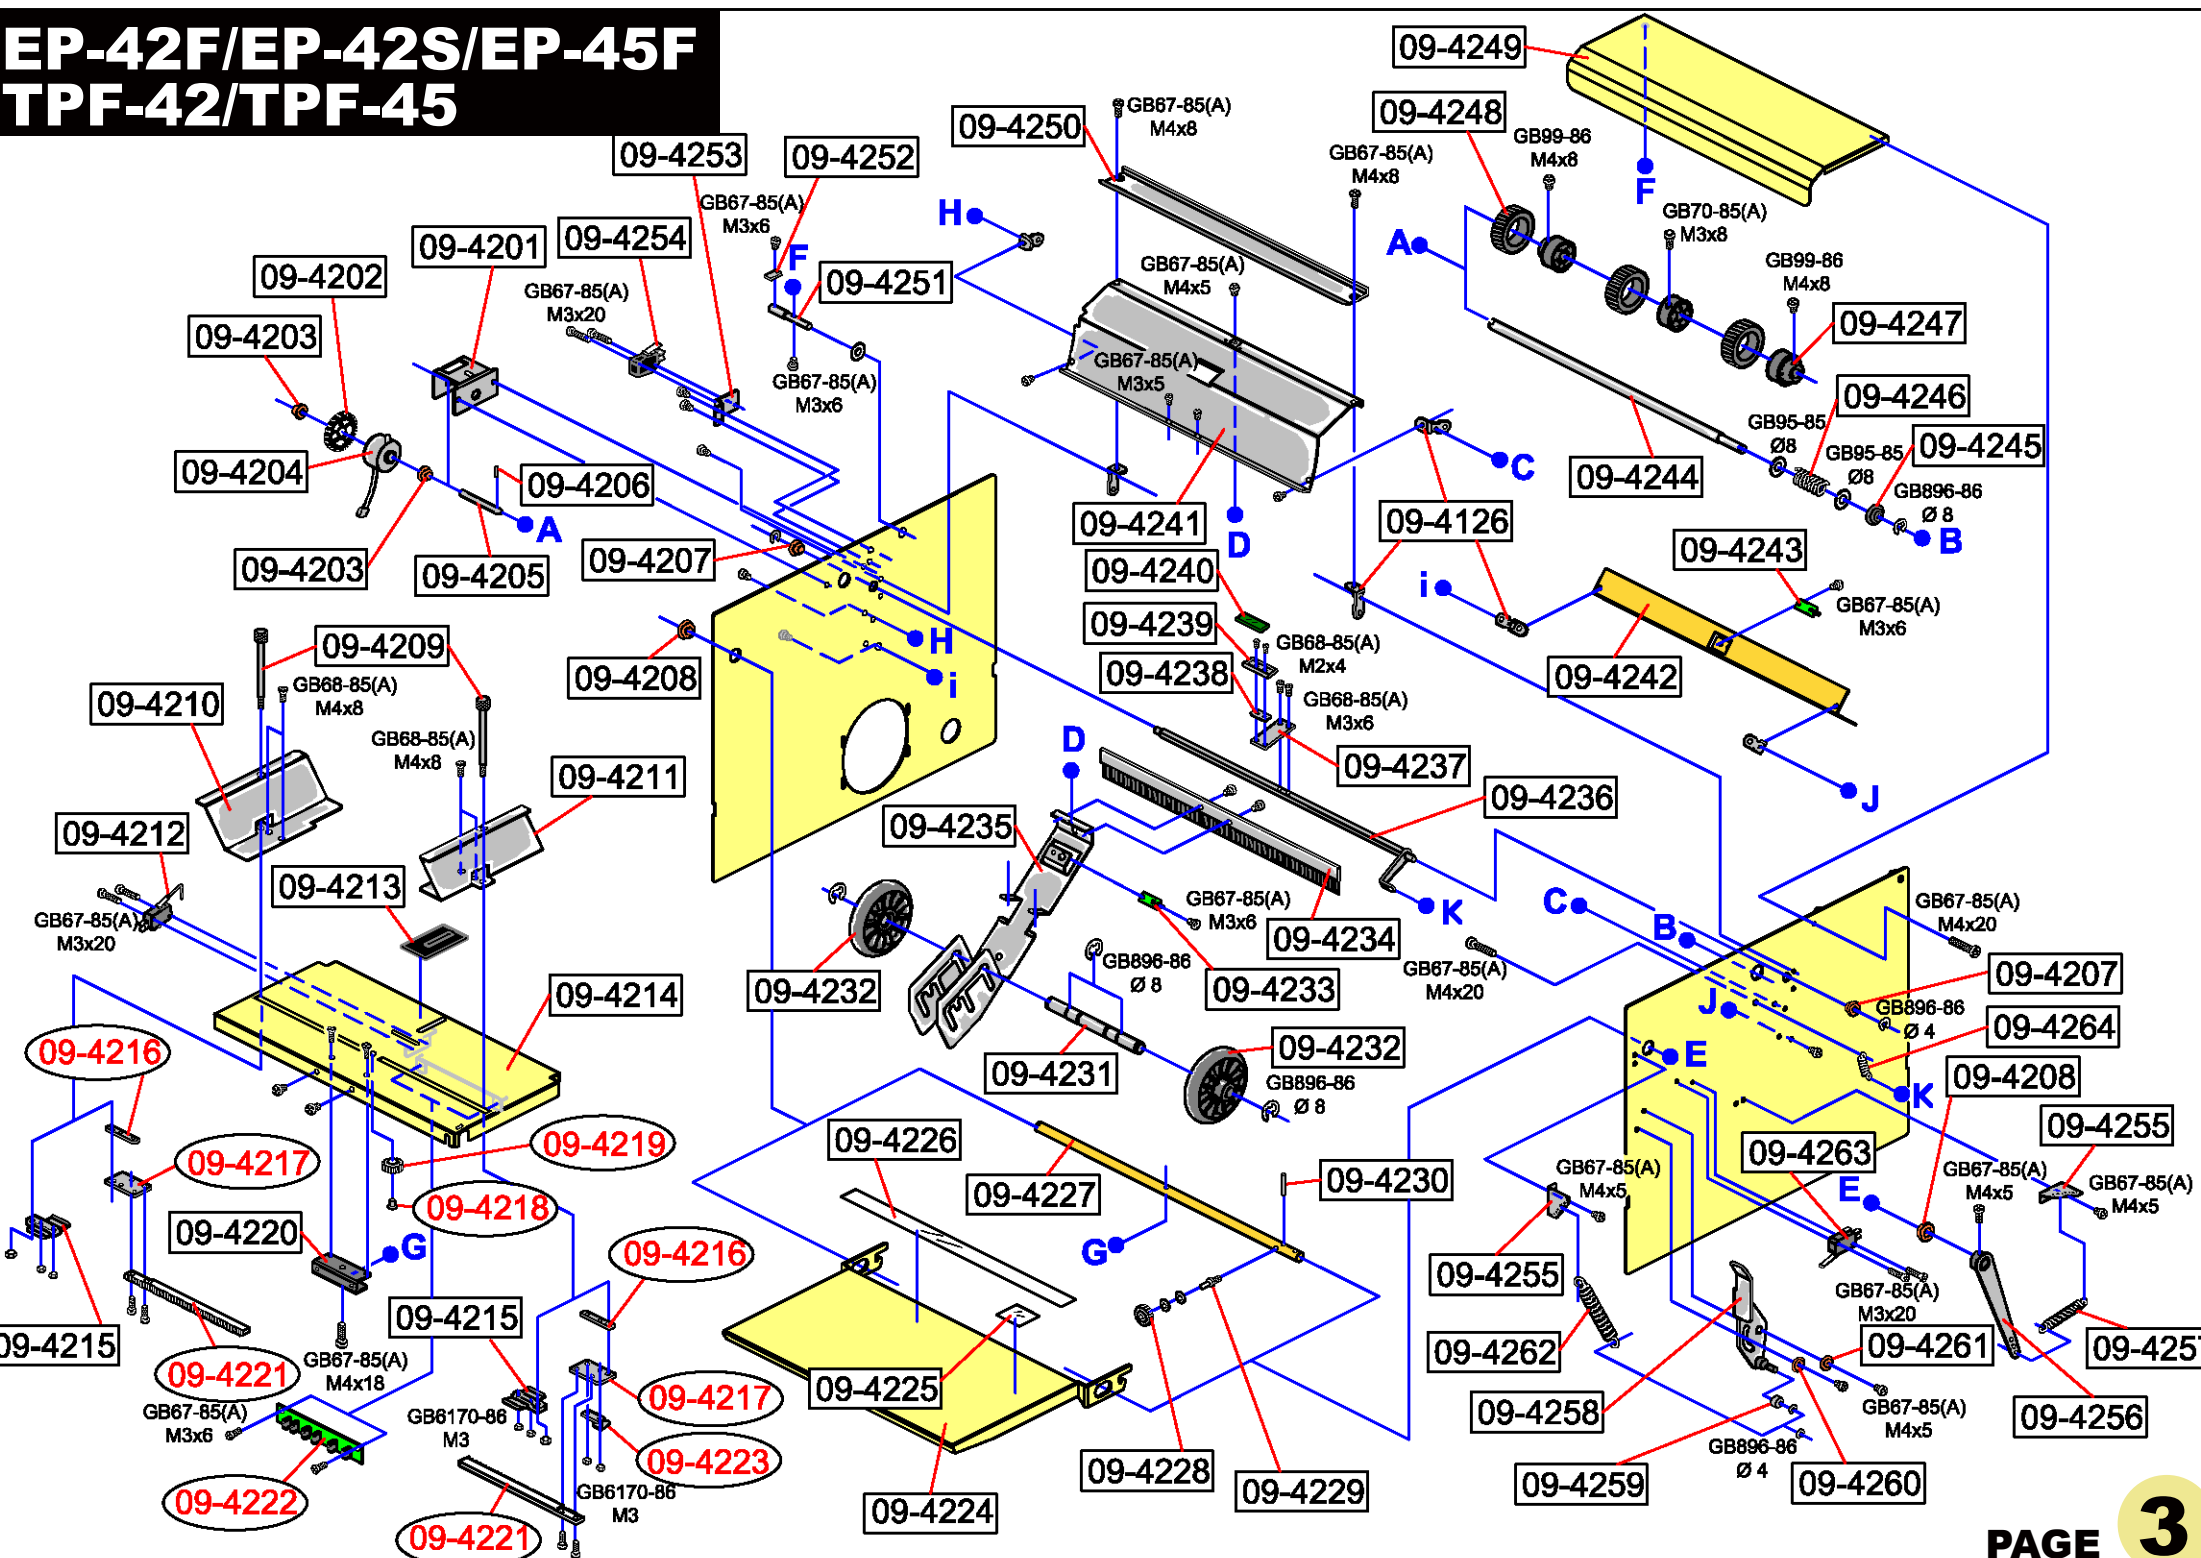

EP-42S/EP-45F TPF-42/TPF-45

EP-42F

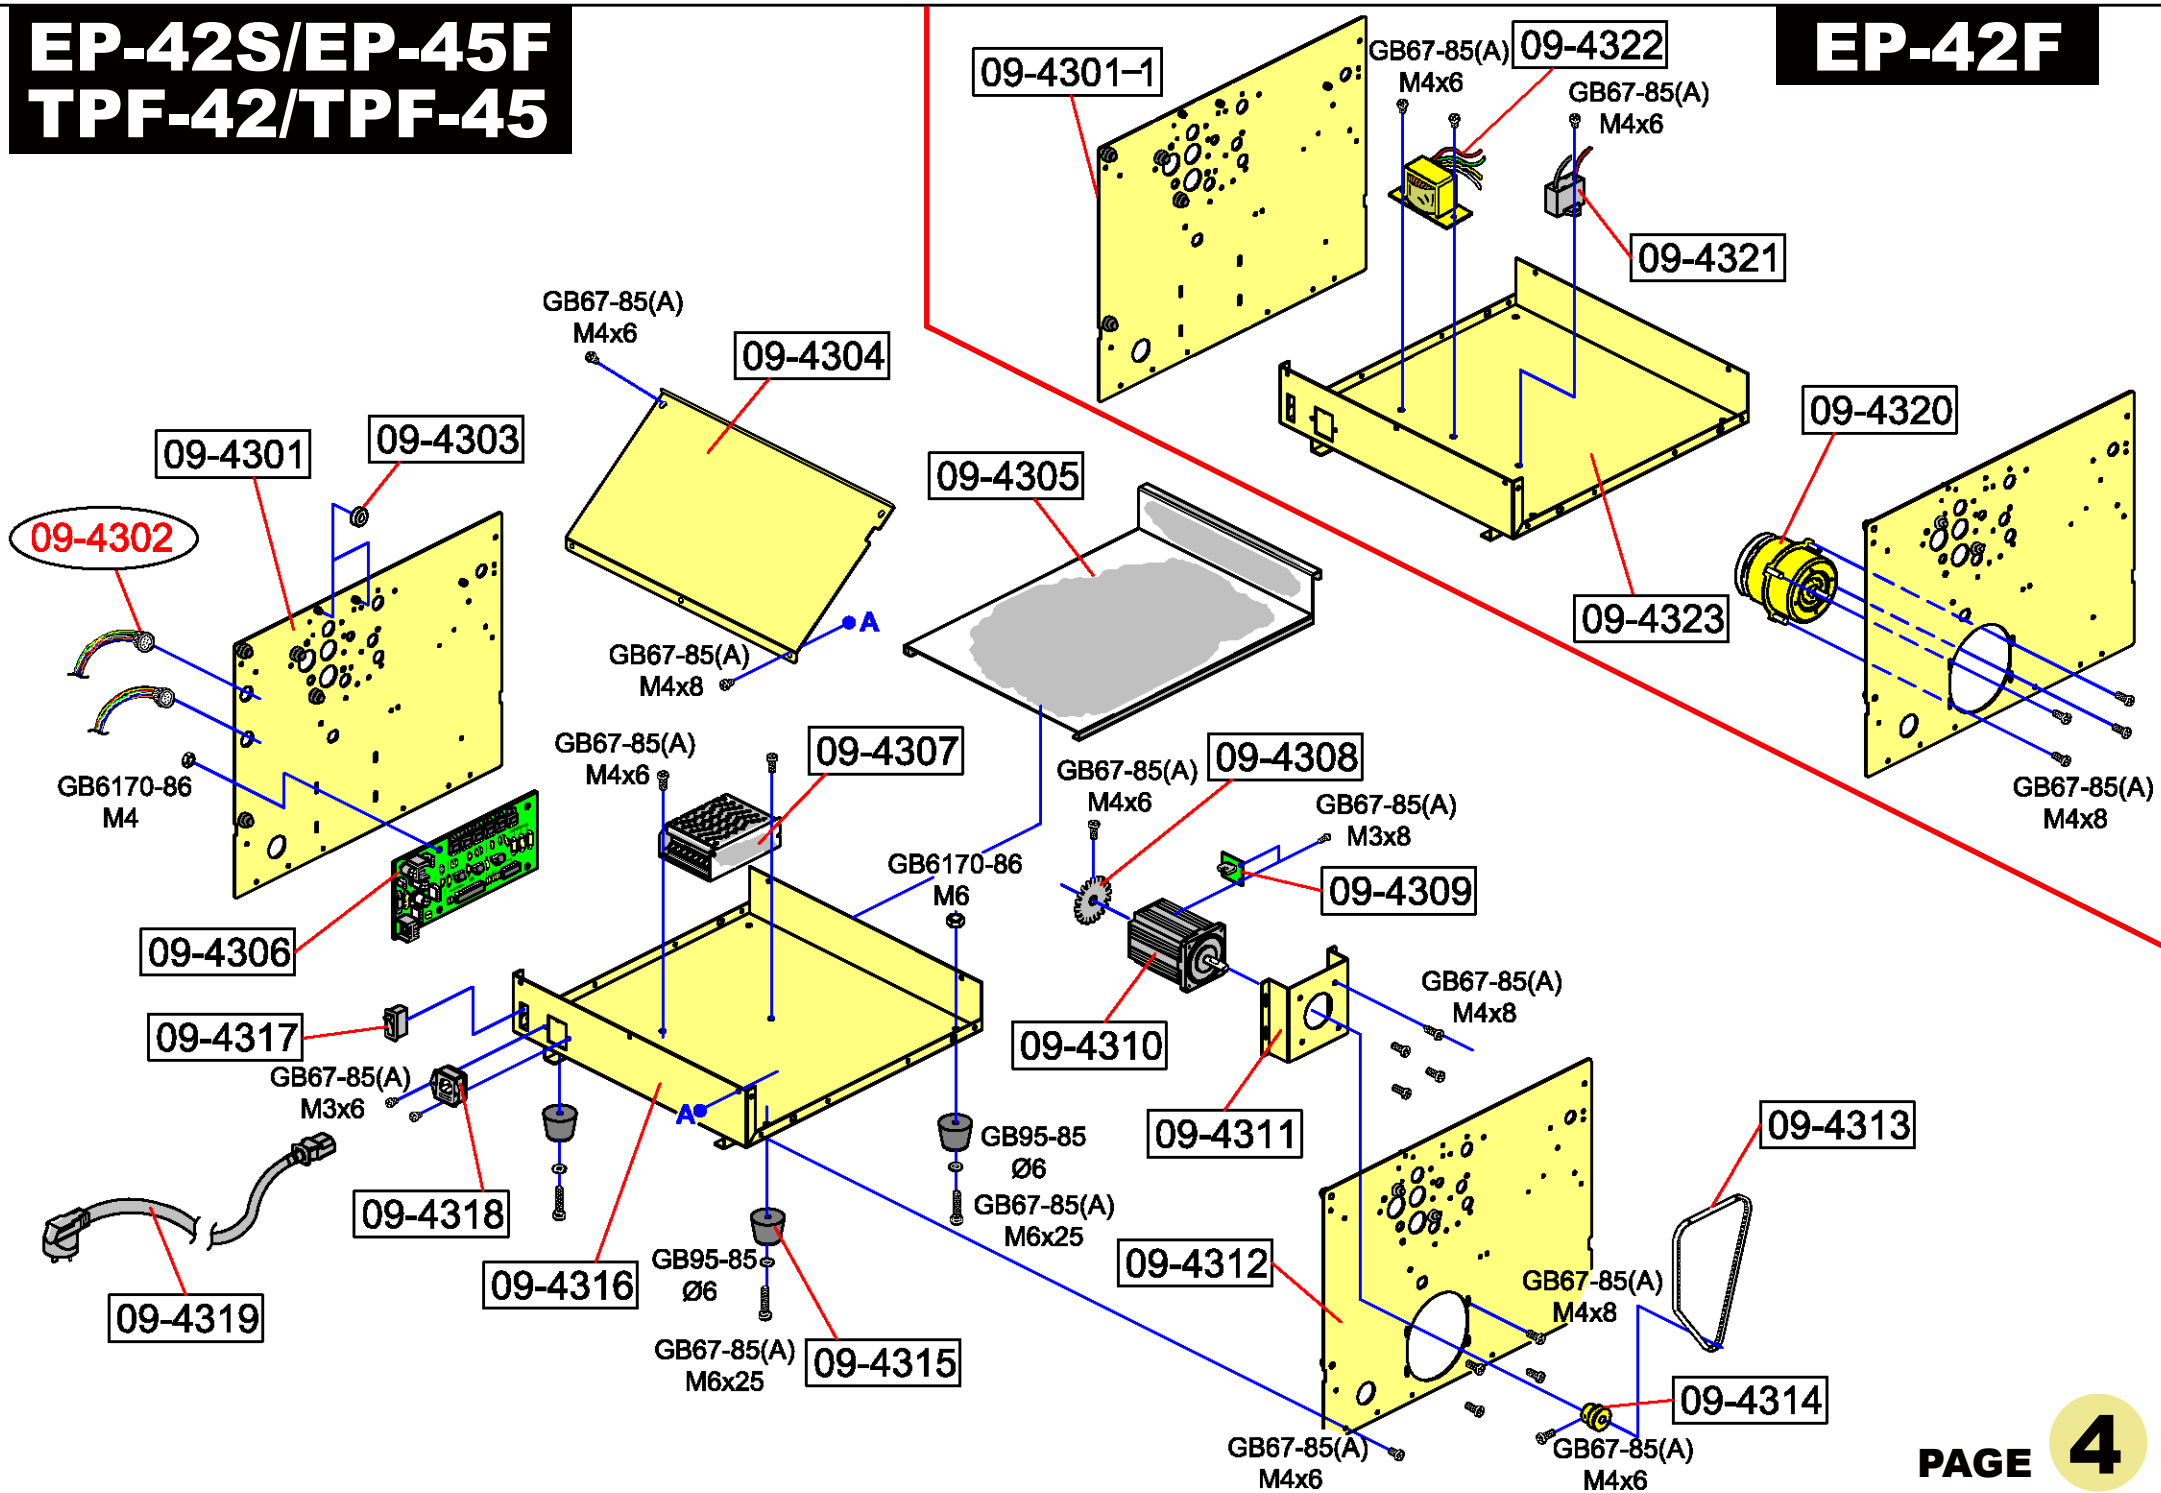

EP-42F EP-42S TPF-42

Table(A)

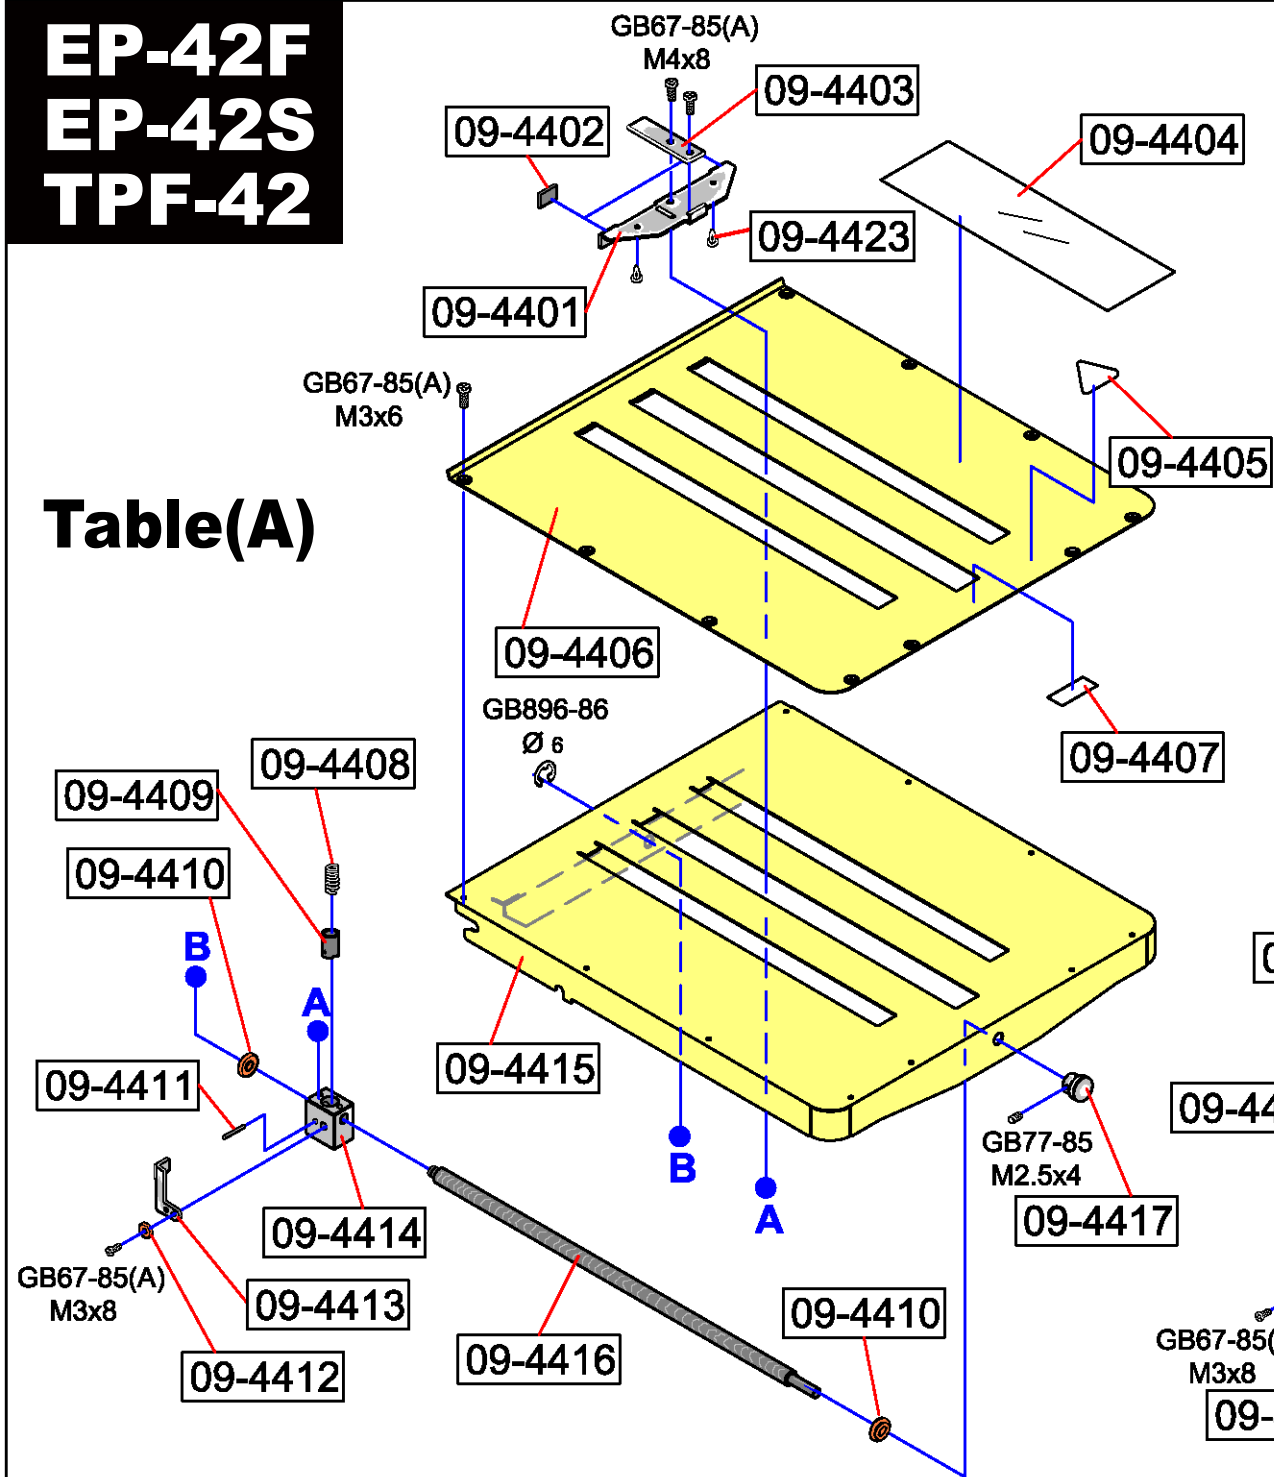


Table (B)

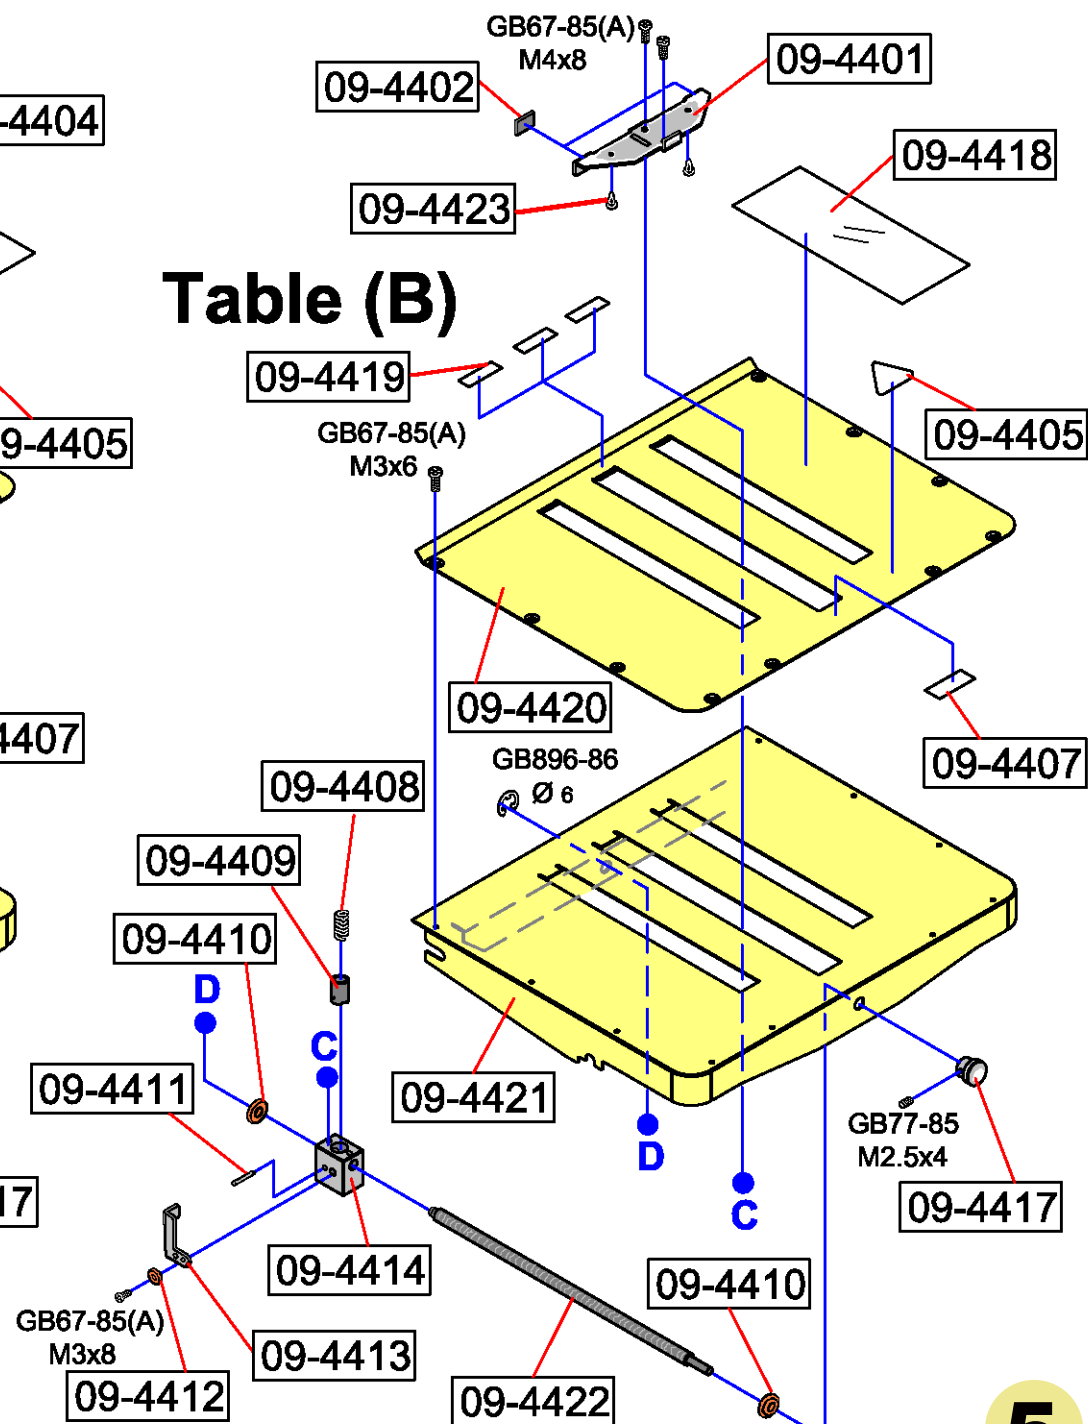


Table (A)



Table (B)



EP-42F/ EP-42S/ EP-45F/ TPF-42/ TPF-45 SPARE PARTS LIST

Page 1

序号/NO.	零件号/Code#	零件名称	Parts Name	EP-42F	EP-42S	EP-45F
09-4001	HF-7K	42F面贴	Operation identification plate	1		
09-4002	0-026	42F右罩壳	Right side cover	1		
09-4003	0-025	42F左罩壳	Left side cover	1	1	
09-4004		小按键	Setting key(blue)	5	6	11
09-4005		圆按键（黄色）	Start key(orange)	1	1	1
		圆按键（绿色）	Start key(green)	1	1	1
09-4006	42F-EPHL	42F线路板	KEY board	1		
09-4007	HF-8K	42S面贴	Operation identification plate		1	
09-4008	0-026-1	42S右罩壳	Right side cover		1	
09-4009	42S-EPHL	42S线路板	KEY board		1	
09-4010	HF-13K	45F面贴	Operation identification plate			1
09-4011		45F右罩壳	Right side cover			1
09-4012		45F左罩壳	Left side cover			1
09-4013	42F-EPHL	45F线路板	KEY board			1

序号/NO.	零件号/Code#	零件名称	Parts Name	EP-42F	EP-42S	EP-45F
09-4101	4-016	左右轴承拉簧	Lift return spring	2	2	2
09-4102	0-021	轴承架	Bearing holder	4	4	4
09-4103	0-022	轴承架挡	Bearing holder washer	2	2	2
09-4104	0-002Right	搓纸轴承座右	F roller holder (R)	1	1	1
09-4105	3-002	进纸摇板轴套	roller bush	2	2	2
09-4106	4-016	轴承挡拉簧	Holder roller spring	2	2	2
09-4107	4-015	搓纸座拉簧	roller spring	2	2	2
09-4108	2-026	主皮带轮	Center roller pulley	1	1	1
09-4109	0-006	拉簧架	Lift cam spring lever	2	2	2
09-4110	4-013	轴承挡	Lift cam	2	2	2
09-4111	2-010	收纸齿轮轴	Paper feed puller center	1	1	1
09-4112	3-004	收纸皮带轮·人齿	Paper feed gear A'ssy	1	1	1
09-4113	2-013	送纸皮带轮轴	Paper ejection pullet center	1	1	1
09-4114	3-003	送纸皮带轮·小齿	Idler pulley for paper feed	1	1	1
09-4115	3-005-1	推纸板轴套	Bush	2	2	2
09-4116	4-002	变速齿轮	Speed reduction gear	3	3	3
09-4117	2-022	支撑杆	Roller moving shaft	2	2	2
09-4118		轴承626	Bearing with snap 626	4	4	4
09-4119	4-007	进纸胶辊	Holder roller	2	2	2
09-4120	4-008	进纸小胶辊	F roller	1	1	1
09-4121	1-013	进纸上压板	Interceptor	1	1	1
09-4122	4-019	进纸上压板拉簧	Interceptor spring	2	2	2
09-4123		轴承6900	Bearing with snap 6900 ZNR	2	2	2
09-4124	0-001-1	扳手（左）	Lift cam lever left	1	1	1
	0-001-2	扳手（右）	Lift cam lever Right	1	1	1
09-4125	4-012	主胶辊	Center roller	1	1	1
09-4126	0-020	支架	Guide fitting angle	8	8	8
09-4127	1-002	出纸板	Paper ejection lower guide	1	1	1
09-4128	2-012	收纸轴	Paper ejection shaft	1	1	1
09-4129	4-011	退纸轮·小	Lower paper ejection roller	4	4	4
09-4130	2-023	支撑杆（槽）	Lower paper ejection roller	1	1	1
09-4131		出纸皮带	Paper feed conveying belt	2	2	2
09-4132	0-002Left	搓纸轴承座左	F roller holder (L)	1	1	1

序号/NO.	零件号/Code#	零件名称	Parts Name	EP-42F	EP-42S	EP-45F
09-4201	0-007	离合器座	Clutch bracket	1	1	1
09-4202	4-006	离合器过轮	Paper feed gear	1	1	1
09-4203	3-001	离合器轴套	Sintered metal	2	2	2
09-4204	EP-33C	离合器	Paper feed clutch	1	1	1
09-4205	2-021	离合器轴	Clutch shaft	1	1	1
09-4206		弹性肖2X10	Spring 2X10	1	1	1
09-4207	3-001	离合器轴套	Clutch bush	2	2	2
09-4208	3-005-2	送纸板轴套	Paper guide bush	2	2	2
09-4209	2-001	边宽定位螺杆	Paper guide knob	2	2	2
09-4210	1-011	放纸边宽左	Paper guide (left)	1	1	1
09-4211	1-010	放纸边宽右	Paper guide (right)	1	1	1
09-4212		行程开关（铁丝）	Microswitch	1	1	1
09-4213		橡胶垫	Brake rubber	1	1	1
09-4214	1-005	堆纸板	Paper feed table	1	1	
	1-005-1	45F堆纸板	Paper feed table			
09-4215	4-001	边宽滑套	Guide	2	2	2
09-4216	5-001	齿条压板	Rack plate			2
09-4217	5-002	齿条板	Rack holder			2
09-4218	5-003	Z齿轴轮	Slide gear wheel			1
09-4219	6-001	Z齿轮	Paper guide slide gear			1
09-4220	1-007	堆纸板架	Paper feed table tray	1	1	1
09-4221	6-002	塑料齿条	Plastic Rack			2
09-4222	EPHL-CX1	堆纸板槽型光电	Paper detection board A'ssy			1
09-4223	5-004	挡板	Photograph sensor lever			1
09-4224	1-019	托纸面板	Paper feed plate	1	1	1
09-4225	HS-01	托纸板面贴	Paper feed label	1	1	1
09-4226	HS-02	纸型规格面贴	Gauge for paper guide	1	1	1
09-4227	2-006	进纸板轴	Paper feed table shaft	1	1	1
09-4228	2-028	调纸轮	Slant adjustment knob	1	1	1
09-4229	2-029	调纸轴	Paper feed slant adjuster	1	1	1
09-4230		弹性肖2.5X14	Cylindrical Shaw 2.5X14	1	1	1
09-4231	2-015	退纸轮轴	Paper ejection roller shaft	1	1	1
09-4232	4-010	退纸轮大	Paper ejection roller	2	2	2
09-4233	EPHL-G1	过纸光电（白）	Paper feed sensor(white)	1	1	1
09-4234	5-001	毛刷	Static eliminator	1	1	1
09-4235	0-011	退纸挡板	Guide U paper ejection	1	1	1
09-4236	0-009-1	送纸垫板杆	Separator shaft	1	1	1
09-4237	0-012	吸纸垫	Separator spacer	1	1	1
09-4238	0-014	吸纸垫块1	Separator holder	1	1	1
09-4239	0-013	吸纸垫块	Paper separator	1	1	1
09-4240		吸纸橡胶	Lower paper guide A'ssy	1	1	1
09-4241	1-008	对纸板	Photo sensor mounting tray	1	1	1
09-4242	0-005	光电架	Light-intercepting sensor	1	1	1
09-4243	EPHL-G2	过纸光电（黑）	Paper feed sensor(black)	1	1	1

09-4244	2-002	搓纸轮轴	Paper feed shaft	1	1	1
09-4245	4-005	搓纸轮弹套	Paper feed bearing	1	1	1
09-4246	4-014	搓纸轮压簧	Paper feed shaft spring	1	1	1
09-4247	4-003	搓纸轮	Paper feed roller	3	3	3
09-4248	4-004	搓纸轮套	Paper feed rubber roller	3	3	3
09-4249	1-017	上盖板	Safety cover	1	1	1
09-4250	1-012	进纸上盖板	Upper paper guide	1	1	1
09-4251	2-004	盖板轴	Safety cover shaft	1	1	1
09-4252	0-024	行程开关压板	Sensor plate	1	1	1
09-4253	0-018	行程开关座	Sensor holder	1	1	1
09-4254		行程开关	Paper feed sensor	1	1	1
09-4255	0-003	弹簧板	Spring hook	2	2	2
09-4256	0-010	台板摇杆	Table lever A'ssy	1	1	1
09-4257	4-021	台板摇杆拉簧	Table spring	1	1	1
09-4258	0-019	摇板	Paper feed table lever	1	1	1
09-4259	3-006	摇板轴套	Table lever bush	1	1	1
09-4260	2-008	进纸调轴座	Paper feed table lever holder	1	1	1
09-4261	2-008	进纸摇板套	Table lever holder	1	1	1
09-4262	4-018	摇板拉簧	Paper feed table level Spring	1	1	1
09-4263		行程开关（铁片）	Micro switch	1	1	1
09-4264	4-020	送纸垫板拉簧	Separator spring	1	1	1

序号/NO.	零件号/Code#	零件名称	Parts Name	EP-42F	EP-42S	EP-45F
09-4301	0-023	45F旁板左	Left side plate			1
09-4301-1	0-023-1	旁板左	Left side plate	1	1	
09-4302	EPHL-DX3	上下调纸板导线	Table control board harness			2
09-4303		橡胶护套	Rubber bush	4	4	4
09-4304	0-017	下盖板	Paper ejection lower guide	1	1	1
09-4305	1-023	下托板	Paper ejection table	1	1	1
09-4306	EPHL-DZB	电机控制线路板	Motor control PCB	1	1	1
09-4307		开关电源	Switching Power supply	1	1	1
09-4308	0-004-Z	编码盘	Shutter plate A'ssy	1	1	1
09-4309	EPHL-CX2	电机槽型光电	Built-in photo sensor	1	1	1
09-4310		无刷直流电机	Paper feed motor with harness	1	1	1
09-4311	0-005-Z	电机支架	Motor plate	1	1	1
09-4312	0-024	旁板右	Right side plate	1	1	1
09-4313		传动皮带	Belt	1	1	1
09-4314	2-003	电机轮	Motor pulley	4	4	4
09-4315		橡皮脚	Rubber leg		1	1
09-4316	1-003-0	底座	Rubber leg table	1	1	1
09-4317		电源开关	Power switch	1	1	1
09-4318		电源线插座	Power socket	1	1	1
09-4319		电源线	Power cord	1	1	1
09-4320		电机110V/220V	Main motor	1	1	1
09-4321		电容2.5uF	Capacitor	1	1	1
09-4322		变压器	transformer	1	1	1
09-4323	1-003	42F底座	Rubber leg table	1		

序号/NO.	零件号/Code#	零件名称	Parts Name	EP-42F	EP-42S	EP-45F
09-4401	0-016	下放纸定位板	Stopper plate	1/1	1/1	1/1
		橡胶皮	Stopper cushion rubber	2/2	2/2	
09-4403	0-023	对折顶板	Push plate	1/0	1/0	
09-4404	HS-03	刻度面贴（长）	folding position gauge(large)	1/0	1/0	
09-4405	HS-05	三角警示面贴	Hand caution label	1/1	1/1	
09-4406	1-016	上放纸面板	Upper table A	1/0	1/0	
09-4407	HS-06	指示面贴	Instruction label	1/1	1/1	
09-4408	4-009-1	尼龙活令压簧	Halfnut spring	1/1	1/1	
09-4409	4-009	尼龙轨道活灵	Half nut	1/1	1/1	
09-4410	2-019	下放纸活灵大	Screw bearing	2/2	2/2	
09-4411		圆柱肖M2.5X10	Cylindrical Shaw 2.5X10	1/1	1/1	
09-4412	2-017	下放纸垫片	Halfnut lever collar	1/1	1/1	
09-4413	0-015	下放纸调节板	Halfnut lever	1/1	1/1	
09-4414	2-016	下放纸轨道滑块	Stopper slider	1/1	1/1	
09-4415	1-015	上放纸底板	Lower table A	1/0	1/0	
09-4416	2-027	长丝杆	Table A screw	1/0	1/0	
09-4417		放纸调节旋钮	Table fine adjustment knob	1/1	1/1	
09-4418	HS-04	刻度面贴（短）	folding position gauge(small)	0/1	0/1	
09-4419	HS-07	警示面贴	Roller caution label	0/3	0/3	
09-4420	1-022	下放纸面板	Upper table B	0/1	0/1	
09-4421	1-021	下放纸底板	Lower table B	0/1	0/1	
09-4422	2-027(2)	短丝杆	Table B screw	0/1	0/1	
09-4423		塑料钉	Canoe clip	2/2	2/2	

序号/NO.	零件号/Code#	零件名称	Parts Name	EP-42F	EP-42S	EP-45F
09-4501	HS-03-F	45F刻度贴膜	folding position gauge(long)			1
09-4502	6-007	长调纸板外壳上	Table A cover (top)			1
09-4503	1-016-F	上放纸面板 (长)	Upper table A			1
09-4504	0-016-1	45F下放纸定位板	Stopper plate			1
09-4505	1-015-F	上放纸底板 (长)	Lower table A			1
09-4506	EPHL-CX3	槽型光电	Photocell			1
09-4507	5-005	槽型光电架	Photocell tray			1
09-4508	5-006	Z过轮轴	Idler center			1
09-4509	6-003	Z小过轮	Idler pulley			1
09-4510	EP-46mm	46同步皮带	Timing belt			1
09-4511	6-005	Z小电机轮	Motor pulley			1
09-4512	5-007	Z小电机架	Motor mounting plate			1
09-4513		Z小电机	Small motor			1
09-4514	5-008	行程开关架	Microswitch bracket			1
09-4515		行程开关	Micro switch			1
09-4516	EP-52mm	52同步皮带	Timing belt			1
09-4517	6-004	丝杆轮	Stopper shatter			1
09-4518	2-016-1	45F下放纸道轨滑块	Stopper slider			1
09-4519	5-010	行程开关架	Microswitch bracket			1
09-4520		弹性肖2X10	Cylindrical Shaw 2.5X10			1
09-4521	2-027-1F	长丝杆	Table A screw			1
09-4522	5-009	铜套	Copper bush			1
09-4523		护线圈	Screw bearing			1
09-4524	6-006	调节旋钮	Table fine adjustment knob(large)			1
09-4525	EPHL-DX1	长调纸板导线	Table A connecting wire			1
09-4526	6-008	长调纸板外壳下	Table A cover (bottom)			1
09-4402		橡皮胶	Stopper cushion rubber			2
09-4403	0-023	对折顶板	Push plate			1
09-4407	HS-06	指示面贴	Instruction label			1
09-4408	4-009-1	尼龙活令压簧	Halfnut spring			1
09-4409	4-009	尼龙轨道活灵	Half nut			1
09-4410	2-019	下放纸活灵大	Screw bearing			1
09-4411		圆柱肖M2.5X10	Cylindrical Shaw 2.5X10			1
09-4412	2-017	下放纸垫片	Halfnut lever collar			1
09-4413	0-015	下放纸调节板	Halfnut lever			1
09-4423		塑料钉	Canoe clip			2

序号/NO.	零件号/Code#	零件名称	Parts Name	EP-42F	EP-42S	EP-45F
09-4601	HS-04-F	45F刻度贴膜	folding position gauge(large)			1
09-4602	6-009	短调纸板外壳上	Table B cover(top)			1
09-4603	1-022-F	下放纸面板 (短)	Upper table B cover			1
09-4604	0-016-1	45F下放纸定位板	Stopper plate			1
09-4605	1-021-F	下放纸底板 (短)	Lower table B			1
09-4606	6-010	短调纸板外壳下	Table B cover(bottom)			1
09-4607	EPHL-DX2	短调纸板导线	Table B connecting wire			1
09-4608	2-027-2F	短丝杆	Table B screw			1
09-4506	EPHL-CX3	槽型光电	Photocell			1
09-4507	5-005	槽型光电架	Photocell tray			1
09-4508	5-006	Z过轮轴	Idler center			1
09-4509	6-003	Z小过轮	Idler pulley			1
09-4510	EP-46mm	46同步皮带	Timing belt			1
09-4511	6-005	Z小电机轮	Motor pulley			1
09-4512	5-007	Z小电机架	Motor mounting plate			1
09-4513		Z小电机	Small motor			1
09-4514	5-008	行程开关架	Microswitch bracket			1
09-4515		行程开关	Micro switch			1
09-4516	EP-52mm	52同步皮带	Timing belt			1
09-4517	6-004	丝杆轮	Stopper screw gear			1
09-4518	2-016-1	45F下放纸道轨滑块	Stopper slider			1
09-4519	5-010	行程开关架	Microswitch bracket			1
09-4520		弹性肖2X10	Cylindrical Shaw 2.5X10			1
09-4521	2-027-1F	长丝杆	Table B screw			1
09-4522	5-009	铜套	Copper bush			1
09-4523		护线圈	Screw bearing			1
09-4524	6-006	调节旋钮	Table fine adjustment knob(large)			1
09-4402		橡皮胶	Stopper cushion rubber			2
09-4403	0-023	对折顶板	Push plate			1
09-4407	HS-06	指示面贴	Instruction label			1
09-4408	4-009-1	尼龙活令压簧	Halfnut spring			1
09-4409	4-009	尼龙轨道活灵	Half nut			1
09-4410	2-019	下放纸活灵大	Screw bearing			1
09-4411		圆柱肖M2.5X10	Cylindrical Shaw 2.5X10			1
09-4412	2-017	下放纸垫片	Halfnut lever collar			1
09-4413	0-015	下放纸调节板	Halfnut lever			1
09-4423		塑料钉	Canoe clip			2